

DKTV Kundecenter

Knowledgebase > Router / Netværksboks > Router > TP-Link > TP-Link - Ændring af netværksnavn/SSID

TP-Link - Ændring af netværksnavn/SSID

DKTV - 2018-06-01 - TP-Link

For at kunne ændre denne funktion forudsætter det, at du er logget ind i routeren.

[Vejledning kan findes her](#)

OBS. Det anbefales at disse ændringer foretages med tilslutning via kabel.

Ændring af netværksnavn/SSID

1. Log ind i routeren - se ovenstående
2. Vælg "Wireless 2,4Ghz" eller "Wireless 5Ghz", afhængigt af hvilket netværk du ønsker at administrere
3. I feltet "Wireless Network Name" angiver du dit ønskede netværksnavn/SSID
4. Tryk på "Save" for at gemme ændringerne.

The screenshot shows the TP-Link Archer C7 web interface. The top header is green with the TP-LINK logo on the left and the text "AC1750 Wireless Dual Band Gigabit Router Model No. Archer C7" on the right. A left sidebar contains a menu with items like Status, Quick Setup, Network, Dual Band Selection, Wireless 2.4GHz, Wireless 5GHz (highlighted), - Wireless Settings, - WPS, - Wireless Security, - Wireless MAC Filtering, - Wireless Advanced, - Wireless Statistics, Guest Network, DHCP, USB Settings, NAT, Forwarding, and Security. The main content area is titled "Wireless Settings (5GHz)" and contains the following fields: "Wireless Network Name" (text input with value "TP-LINK_F00F_5G" and a note "(Also called the SSID)"), "Region" (dropdown menu with "United States" selected), a "Warning" message: "Ensure you select a correct country to conform local law. Incorrect settings may cause interference.", "Mode" (dropdown menu with "11a/n/ac mixed" selected), "Channel" (dropdown menu with "Auto" selected), and two checkboxes: "Enable SSID Broadcast" (checked) and "Enable WDS Bridging" (unchecked). A "Save" button is located at the bottom of the settings area.

Related Content

- [TP-Link - Log ind i routeren](#)

- [TP-Link - Ændring af kanal](#)
- [TP-Link - Ændring af netværkskode/Wireless password](#)